


SERIES 3

ASSEMBLY INSTRUCTIONS

- COMPONENTS FOR KIT
 1X 1200X100 FLUE
 1X 100 S/S CHINAMAN'S HAT COWL
 1X 1200X150 MESH SHIELD
 4X SELF TAPPING S/S SCREWS FOR FLUE(1 SPARE)

- 1X BAG OF FITTINGS CONTAINING
 1X THREAD TAPE MUST BE USED ON ALL THREADS
 1X STRAIGHT TAIL 2" PLASTIC (A)
 1X STRAIGHT PLASTIC TAIL (B)
 1X 90° M&F BEND BLACK PLASTIC (C)
 2X TUB TAILS BLACK PLASTIC (D)
 4X HOSE CLAMPS (E)
 1.5M HI TEMP RIBBED MATT BLACK HOSE (F)
 1.5M LOW TEMP SHINNY DARK BLUE HOSE (G)

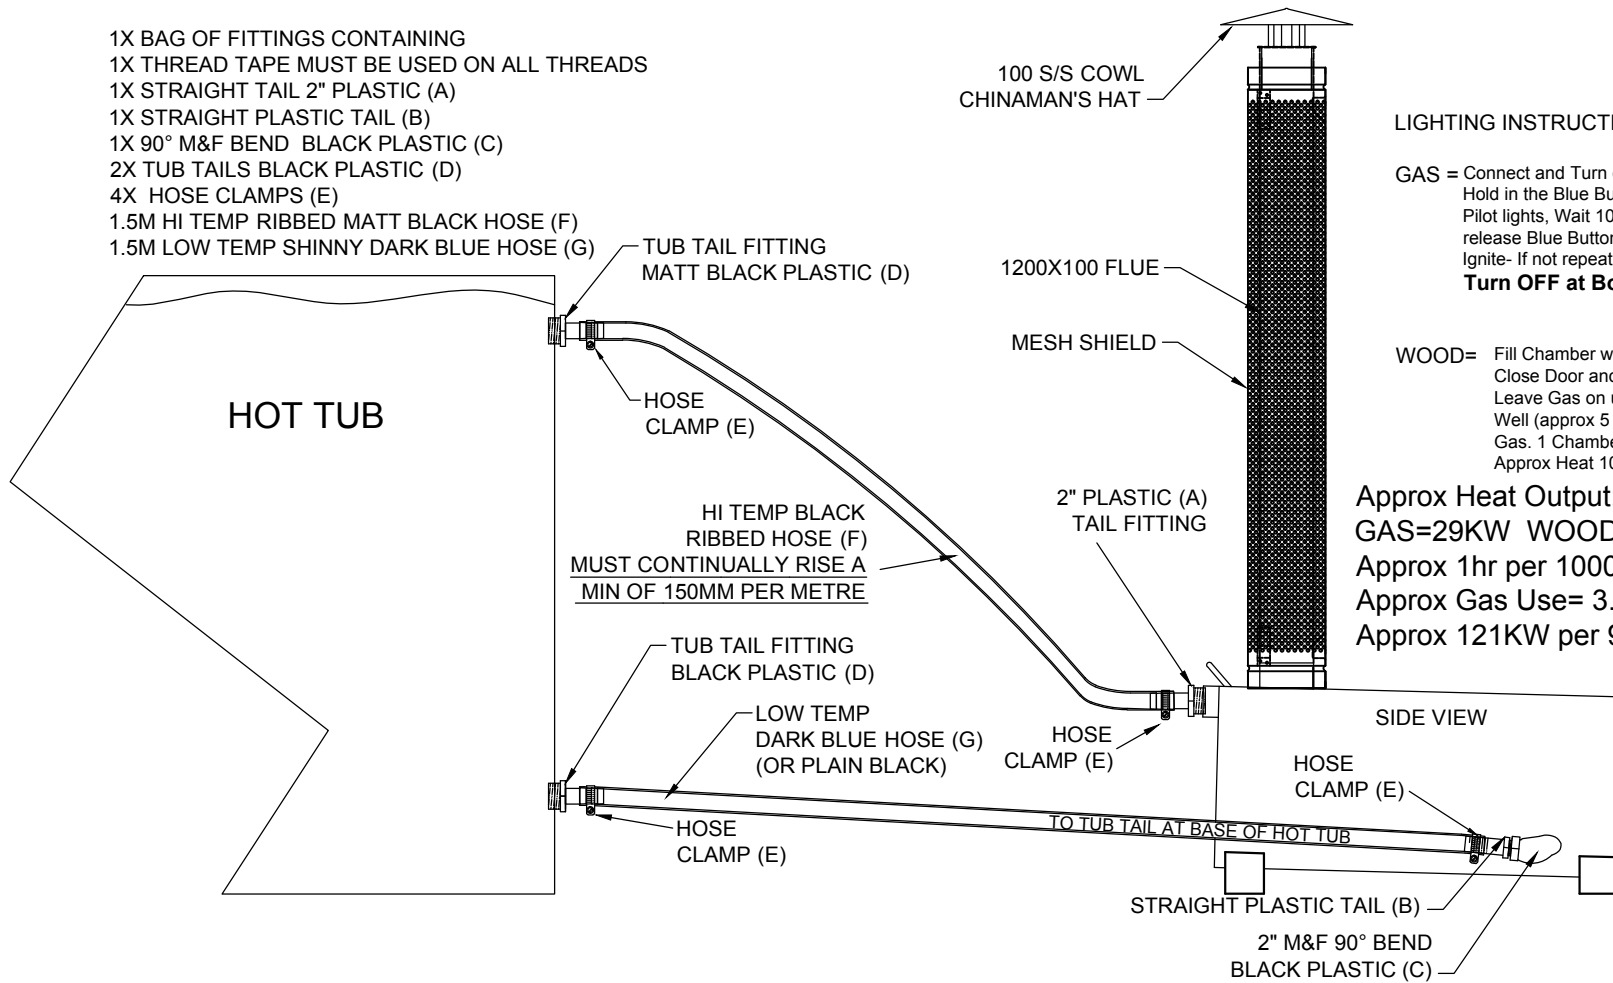

LIGHTING INSTRUCTIONS

GAS = Connect and Turn on Gas at Bottle
 Hold in the Blue Button and Ignitor until Pilot lights, Wait 10 seconds and slowly release Blue Button. Main Burners should Ignite- If not repeat procedure.
Turn OFF at Bottle to Shut Down

WOOD= Fill Chamber with Dry Wood
 Close Door and Light Gas as above
 Leave Gas on until Wood is Burning Well (approx 5 Mins) Then Turn Off Gas. 1 Chamber Off Wood Should Approx Heat 1000Lts

Approx Heat Output:
 GAS=29KW WOOD=40KW
 Approx 1hr per 1000lts
 Approx Gas Use= 3.5Kgs per Hr.
 Approx 121KW per 9KG Bottle